
Holder



Guide Foot



U Gouge Position



V Gouge Position


Sharpener Instructions:

TO SHARFEN GOUGES, attach guide foot to holder in upright position as shown. Insert carving tool and tighten down to set desired angle Arrange your sharpening stone on a flat surface, the same

level as the Oar Sharpener.

For example, if your sharpening stone is 1/2 thick, use a 1/2 thick piece of wood or other material so both are on the same plane. Then slide tool back and forth in a (side to side) rocking motion. Start by using a coarse stone with light oil to obtain desired angle on tool. When this is accomplished, you can repeat the process using a fine stone and then strop with a leather strap or belt to which rouge has been applied. The result will be a razor sharp edge.

TO SHARPEN 'V' IOOLS, insert the "V" tool into the holder. (note: there are three threaded holes at the bottom of holder.) Insert the



Position


correct size guide screws to obtain the desired angle as shown. To change angle, adjust guide screws to desired slant and sharpen both sides of 'V' tool.

1-800-284-6229 599000

TO SHARPEN STRAIGHT CHISELS, attach guide foot reverse of gouge position as Straight Chisel shown, set desired angle and use same as 'V' tool

or gouge to sharpen using a back and forth motion on the sharpening stone.



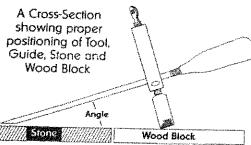

Wood Carvers Supply, Inc.

Since 1955, 1-800-284-6229 Post Office Box 7500 Englewood, FL 34295-7500